7. Level 2 Repair

7-1. Disassembly and Assembly Instructions

7-1-1. Disassembly

1 Disjoint Hook at REAR // Disassemble REAR	
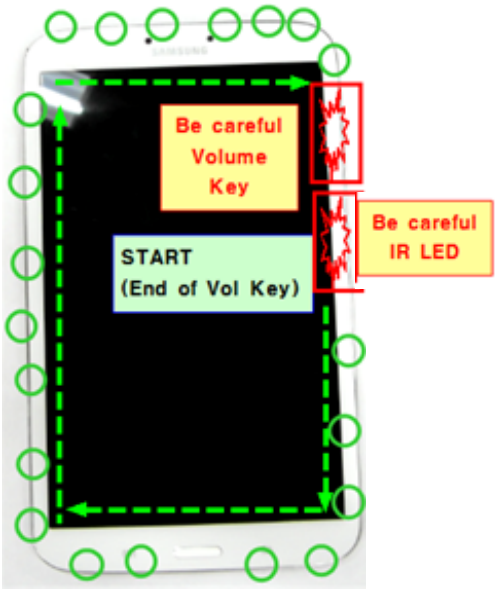	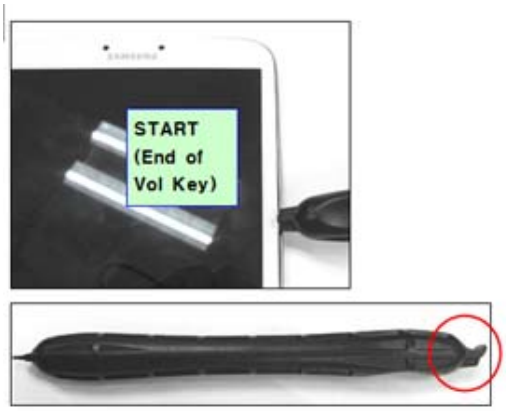
1) Be careful not to make scratch and molding damage!	1) Use flat point of disassembly jig
2 Disassemble SCREW	3 Disassemble FPCB
1) Disassemble SCREW(12point) 2) Detach Battery connector	1) Hold up Main PBA from bottom. 2) Be careful not to scratch FPCB

Confidential and proprietary-the contents in this service guide subject to change without prior notice.
Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

4 Disassemble SPK(L),(R), IF PCB	5 Disassemble PBA
	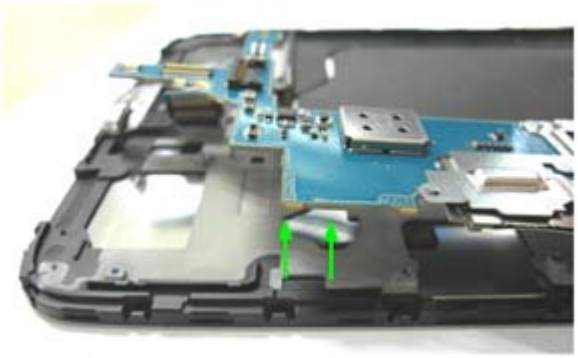
	1) Hold up Main PBA from FRONT. 2) Be careful not to scratch FPCB

7-1-2. Assembly

1 Assembly PBA	2 Assembly IF PCB/SPK on FRONT.
	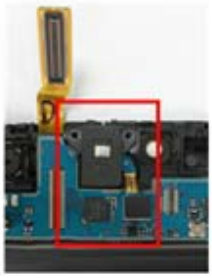 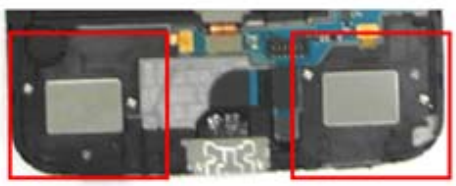
1) Assemble PBA on Front Ass'y 2) Check Front hook.	1) Assemble IF PCB , Earjack and SPK on Front.

Confidential and proprietary-the contents in this service guide subject to change without prior notice.
Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

3 Assemble connector	4 Assemble SCREW
.1) Be careful not to scratch FPCB	1) ◯ : 1.4 * 2.5 (Silver, 6001-002051) 13 point 2) Drive Screws with torque 1.2 ± 0.1 Kgf/㎠

5 Assemble REAR	
	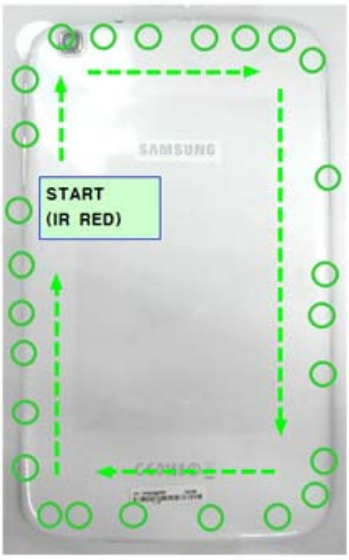
1) Assemble REAR hook	

Confidential and proprietary-the contents in this service guide subject to change without prior notice.
Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.